

VB-FULLAIR 2C REMOTE

Motorhome version




FERRY ± <30 km/h

Greater ground clearance is created at the rear of the vehicle, making it easy to drive onto a ferry.

CARGO SPACE <0 km/h

Less ground clearance is created at the rear of the vehicle, making it easier to load and unload the cargo space at the rear of the vehicle.

MANUAL <0 km/h

 For varying the loading/unloading height.

FRONT/REAR <0 km/h

Press the button to raise the vehicle to ride-height.

YOUR AIR SUSPENSION SYSTEM

making everyday smoother



USEFUL LINKS:

As an end user, you can always be sure of finding a VB-Partner nearby, even if you're on your travels. Just enter your location to find all the relevant contact details for the closest VB-Partner to you.


Want to know how this works? Go to our updated VB-Partner page to find out.

1. VB-Partner page: www.vbairsuspension.com/partners
2. User manual: www.vbairsuspension.com/downloads

DETAILS OF YOUR AIR SUSPENSION SYSTEM:

Please refer to your VB-Airsuspension information card (found at the front of your user manual) for more information about your air suspension system.

SERVICE, MAINTENANCE OR REPAIRS?

In this case, we would strongly recommend setting your air suspension system to 'service mode', otherwise you might end up with some annoying issues. The button for service mode can be found on your remote control (VB-Remote) and is marked with a tool icon . If you are taking your vehicle to a different garage (not the one you normally use for service, maintenance or repairs) and this garage is not part of our VB-Partner network, you should inform them that your vehicle has an air suspension system and that service mode must be switched on before they start work on your vehicle.

EXPLANATION OF ICONS:

 Ignition switched off

 Ignition switched on

 Handbrake on, depending on the software